



Fullerton College Staff Development

Using the Upgraded Control Panel

Several Demo Stations on campus have been upgraded with a control panel that provides the instructor with one-button control of the projector, computer, DVD, VCR, and document camera; in other words, the remotes are not required. (Please note that there is no need to change the upgraded Extron equipment that is inside the cabinet.) To find out if your classroom has one of these stations, check the Demo Station spreadsheet.



MANUALLY turn on the particular component(s) you want to use, inside the Demo Station. (e.g., the computer)

NOTE: Press the Input Selector button, manually, on the DVD/VHS player (the sound system – inside the Demo Station) to play either a DVD (DVD/CD) or a video (VCR.)

1 - ON THE CONTROL PANEL, press ON to TURN ON THE PROJECTOR. (OFF to turn if off)

2 - ON THE CONTROL PANEL, press the button for the CORRESPONDING COMPONENT you want to use. (e.g., PC)

3 - To TOGGLE, press the appropriate button on the control panel. (e.g., DVD)

4 - Move through the menu of your DVD or Video by using the appropriate arrows. Return to menu with "Menu". (or use the appropriate remote)

PREV/REW PLAY NEXT/FWD PAUSE STOP

5 – ON THE CONTROL PANEL, adjust the volume as needed.

Optional: Next to the Control Panel, there are cables to connect a laptop or microphone.